 
 


Montážní návod  
Assembly instruction

 
 
 
 
 
 
HLS800Y  
HLS900Y

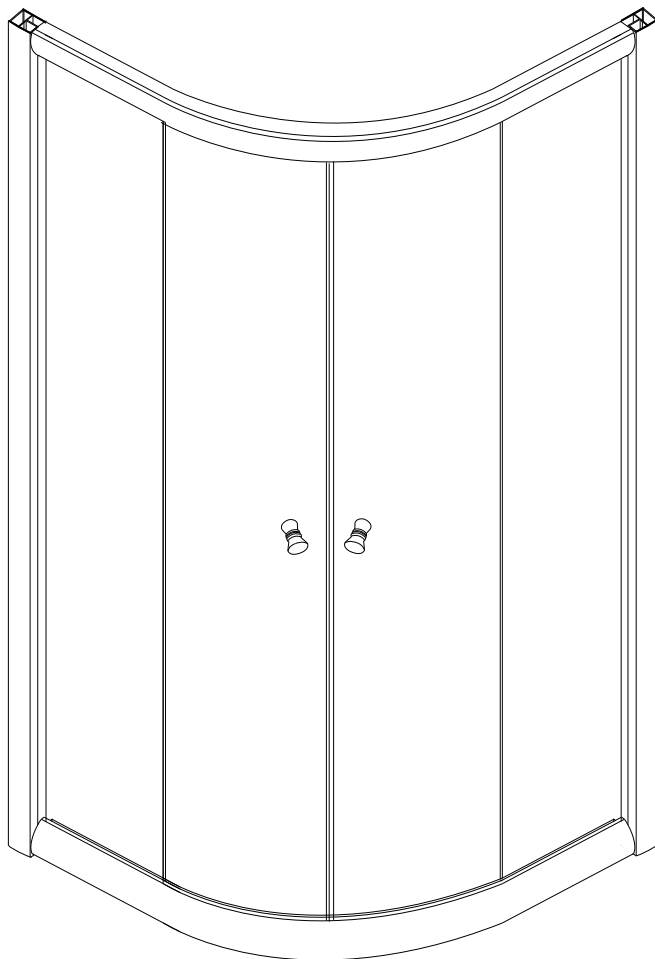



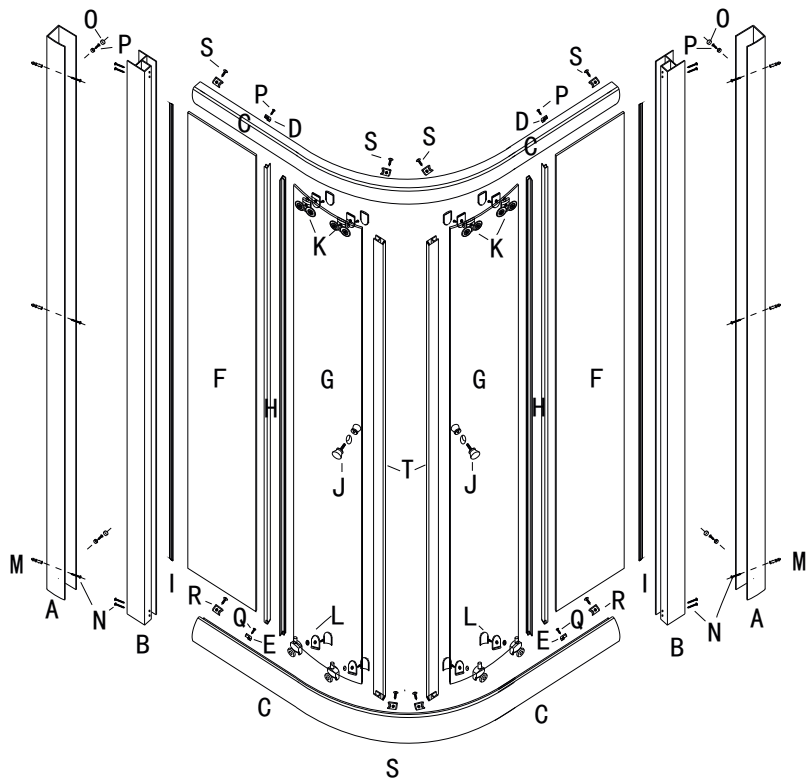


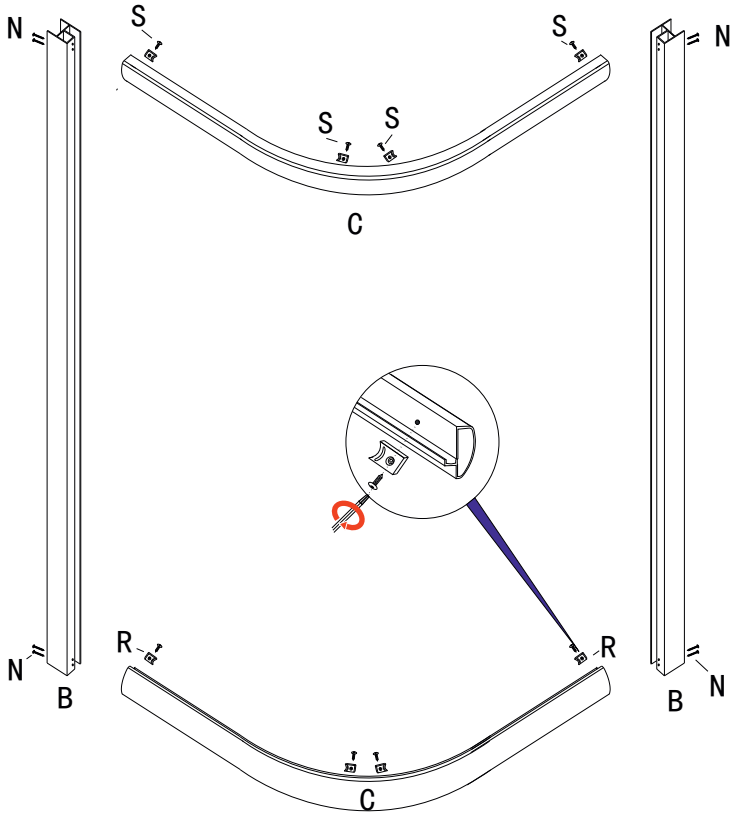 
 


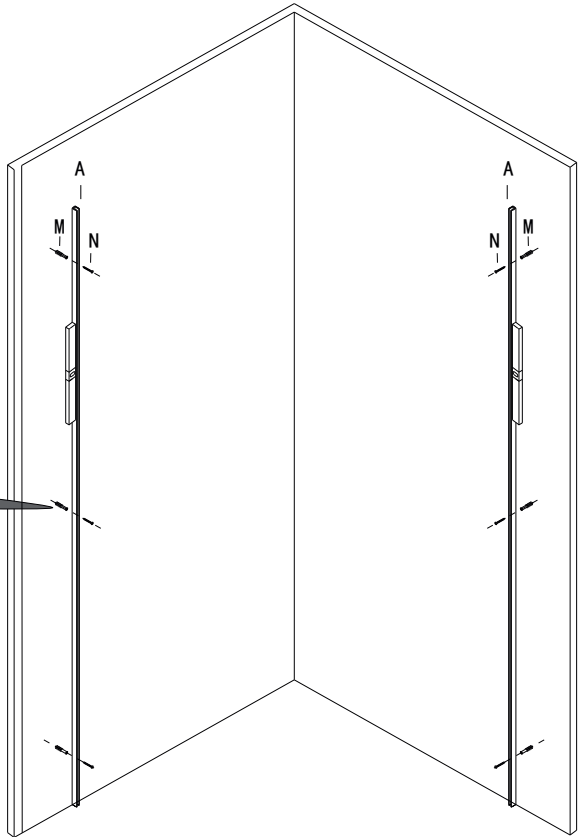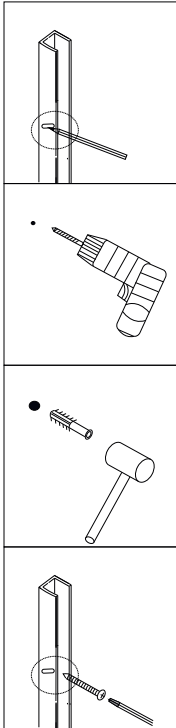

A		X2	I		X2	Q		M4*8	X2
B		X2	J		X2	R			X8
C		X2	K		X4	S		M4*10	X8
D		X2	L		X4	T			X1
E		X2	M		X6				
F		X2	N		X14				
G		X2	O		X4				
H		X4	P		X6				

 
 
A		x2
M		x6
N		x6



 




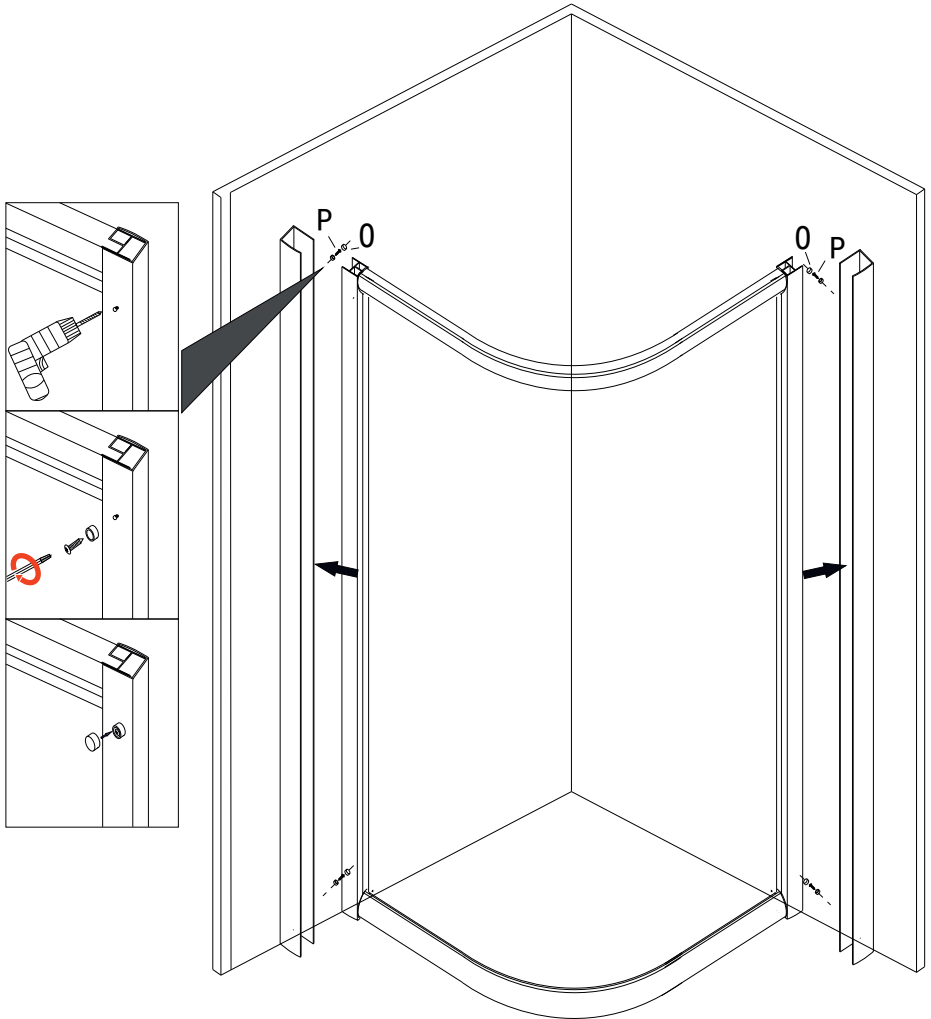

 
 
B		X2	N	 M4*30	X8
C		X4	S	 M4*10	X8
R		X8			

 
 
 




 
 
 
0		X4
P	 M4*10	X4

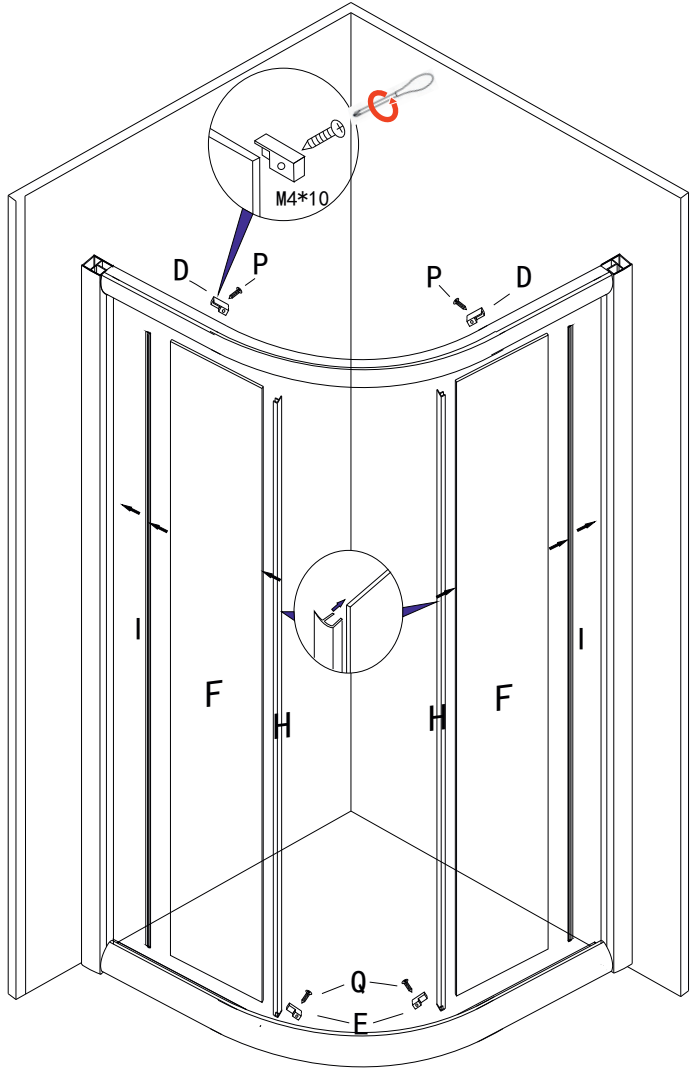

D		X2	H		X2
E		X2	P	 M4*10	X2
F		X2	Q	 M4*8	X2
I		X2			



G		X2	T		X1
H		X2	L		X4
K		X4			

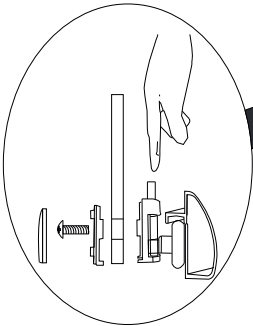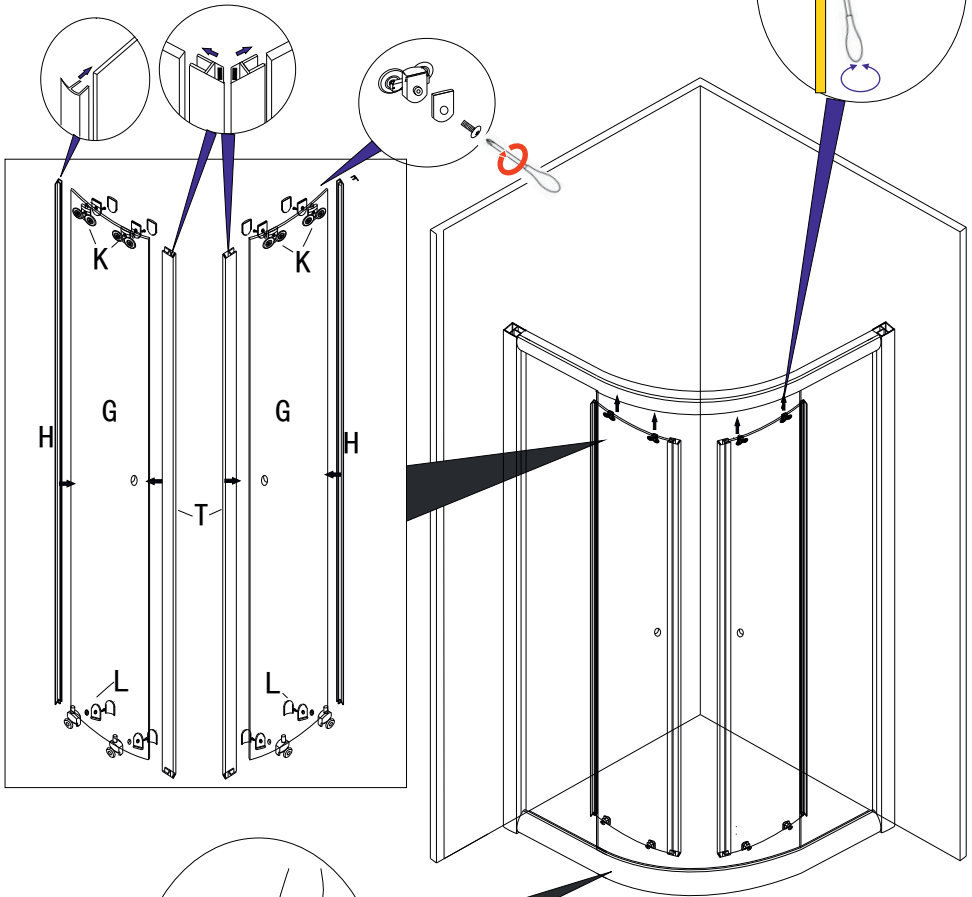

J



2

